




**Aluminum  
Alloy Zipper  
with  
Recycled Tape**

**YKK™**

Little Parts. Big Difference. >>>

# Aluminum Alloy Zipper with Recycled tape

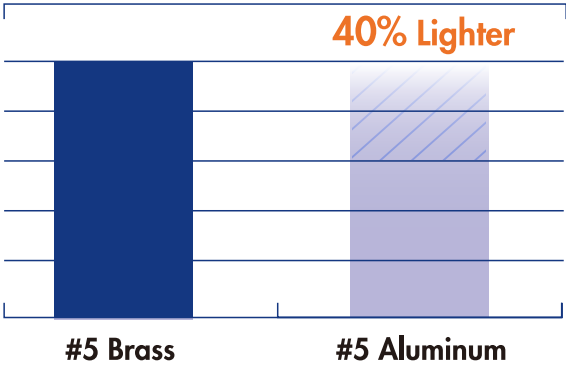


## Lightweight

Size 5, 60cm open-end:


Approx. 40% lighter than standard brass zipper.

## Finish Variation


Variations for Aluminum Zipper.

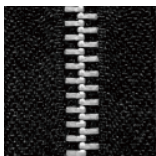


[1] Silver  
[2] Silver(Anodized)

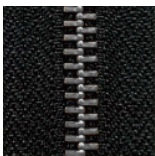

Antique Silver

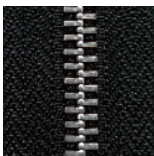

Shiny Antique Silver

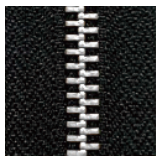

Shiny Aluminum

\*Please note the image tone may appear different from actual sample due to printing conditions/limitations.

## Availability

| Size | Chain Type |                      |                |                      |                | Classification |      |         |       |
|------|------------|----------------------|----------------|----------------------|----------------|----------------|------|---------|-------|
|      | [1]Silver  | [2]Silver (Anodized) | Antique Silver | Shiny Antique Silver | Shiny Aluminum | Close          | Open | Two-Way | Chain |
| 3    | -          | YARN                 | YARTH          | -                    | -              | ○              | -    | -       | -     |
| 3    | MA         | -                    | MATH           | -                    | -              | ○              | ○    | -       | ○     |
| 5    | RA         | RAN                  | RATH           | RASTH                | RAS            | ○              | ○    | ○       | ○     |
| 8    | MA         | -                    | MATH           | MASTH                | MAS            | ○              | ○    | ○       | ○     |
| 10   | MA         | -                    | -              | -                    | -              | ○              | ○    | ○       | ○     |

\*Please contact our sales office for details on the availability of #3 Standard Metal Zipper and #8 Standard Metal Zipper with recycled tape.

## Care Information

Aluminum alloy zippers have the advantage of the lightweight properties of aluminum, but due to their nature, some precautions must be taken.

Aluminum is sensitive to acids and alkalis. Please refrain from any post-processing such as stone wash, enzyme wash, acid wash, resin, over-dye, high-concentration bleach, alkali wash, or other washing processes that are chemically based. Please be sure to immediately and thoroughly rinse off any chemicals used in the finishing process.

Aluminum is a soft metal and tends to be easily scraped by friction. Aluminum alloy zippers cannot be used in combination with copper alloy sliders such as GA and GS types.

Please fully understand the special features and care instructions above before ordering in large quantities and conducting product tests. Product testing is strongly recommended.

